

conveyor can be used to move your mold under the injector and fill the mold.

# **DIMENSIONS**

- HEIGHT = 60"
- WIDTH = 26"
- DEPTH = 24"
- WEIGHT = 490 Lbs

## POWER

220 VOLT, 40 AMPS 3 CFM CLEAND DRY AIR

# **INSTALLATION**

- 1. Bolt machine to floor.
- 2. Connect air supply using clean dry air.
- 3. Connect power cable to power source.

# **OPERATIONS**

- 1. Set pump gauge for desired injector pressure.
- 2. Set hose temperature controller.
- 3. Set valve temperature controller...
- 4. Press foot switch to fill mold / release when full.

# MAINTANCE

Injector valve requires o-ring replacement on occasions.

# <u>SAFETY</u>

- PROPER TRAINING IS REQUIRED FOR ALL PERSONS PRIOR TO OPERATING THIS MACHINE!
- NO MINOR ALLOWED TO OPERATE THIS EQUIPMENT!
- USE CAUTION WHEN OPERATING , PLASTIC MATERIAL IS EXTREMELY HOT AND CAN CAUSE SERIOUS BURNS.